


G-TEL Coinless 2110 Series PCB Diagram

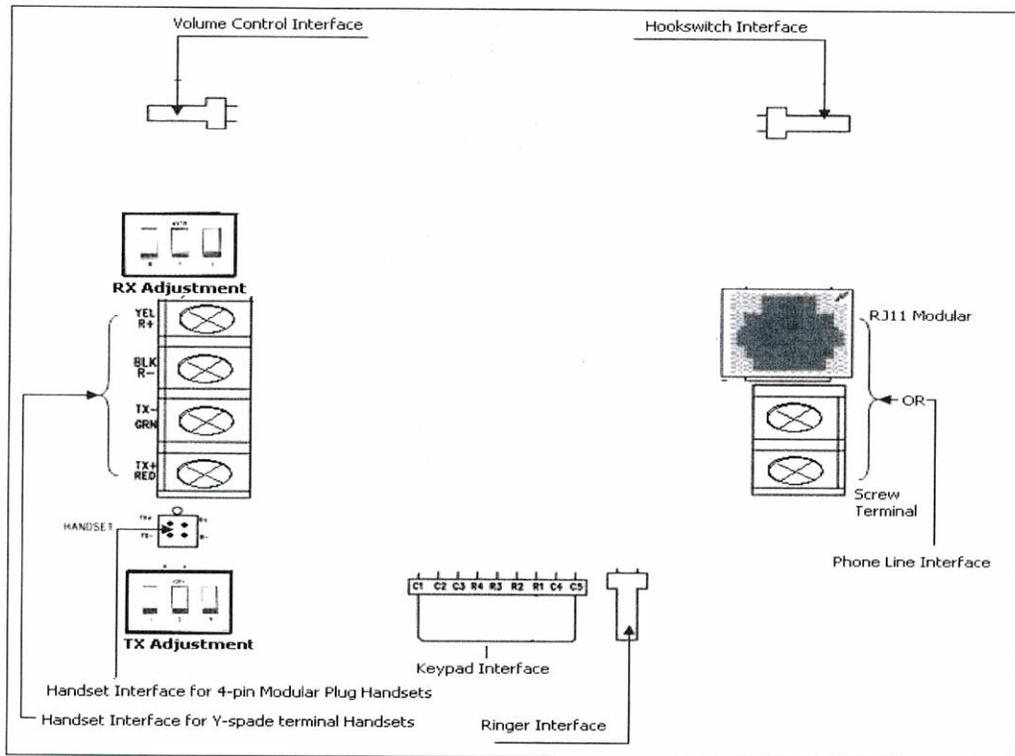


Side Tone Adjustment Instructions

Transmitter Sound Adjustment

If the sound is too loud, turn [1 ON] and [2 & 3 OFF]

If the sound is too low, turn [3 ON] and [1 & 2 OFF]

Default setting is [1 ON] and [2 & 3 OFF]

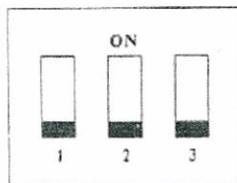

TX / RX-Adjustment
Switch

Receiver Sound Adjustment

The ON position will lock the receiver volume to a pre-set level, and will disable the external volume button

Default setting is [1, 2 & 3 OFF]

SW 1 = LOW SW 2 = MED SW 3 = HIGH