




Universal Developer Kit 2.0

Driver Installation


This document provides steps for installing the Exar Driver for the UDK 2.0 Developer Board.

On the computer you are using with the UDK board:

1. Extract the driver installer from the zip file.
2. Right-click on the driver .EXE file and select **Run as administrator**.

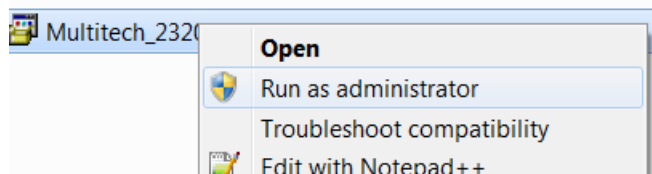

3. Select **Yes** to allow the program to make changes to your computer. The Device Driver Installation Wizard launches.

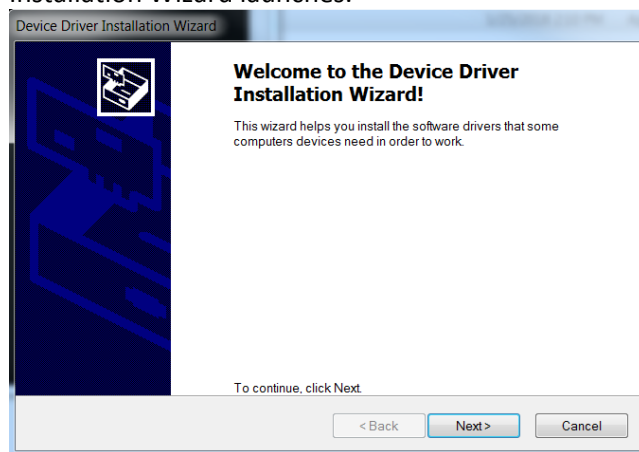

4. Click **Next** and then click **Install**.
5. Click **Finish** when the Wizard indicates the driver has been installed.
6. Power up the UDK board using the power supply provided with your developer kit.
7. Connect the micro USB cable to both the PC and the UDK board.

Windows detects the new hardware and installs the device driver.