


**The Yale & Towne Mfg. Co.**  
**FIXING INSTRUCTIONS**  
**Spring Door Closing No. 5.**  
**G.P.O. No. 62 Mark 3**  
**DOOR CLOSER**



**TO APPLY SPRING TENSION**  
**FOR LEFT HAND DOORS**  
 Release Pawl and turn Ratchet with wrench in anti-clockwise direction.  
 Engage Pawl when tension is sufficient.  
**FOR RIGHT HAND DOORS**  
 Release Pawl and turn Ratchet with wrench in a clockwise direction.  
 Engage Pawl when tension is sufficient.  
 It is necessary to alter the amount of spring tension applied by Ratchet, to suit varying weights of doors and conditions under which they operate.  
 Normal adjustment, 4 notches.  
**Maximum adjustment, 6 notches.**

**TO ADJUST CHECKING ACTION**  
 Start with notch on screw at top (full check position) and turn very slowly to left, thus decreasing Checking Action.

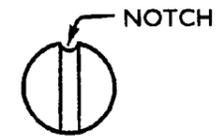


POSITION OF SCREW WITH FULL CHECK ADJUSTING SCREW E.

The Gland Nut **H** must not on any account be disturbed, and the Adjusting Screw **E** must not be taken out.

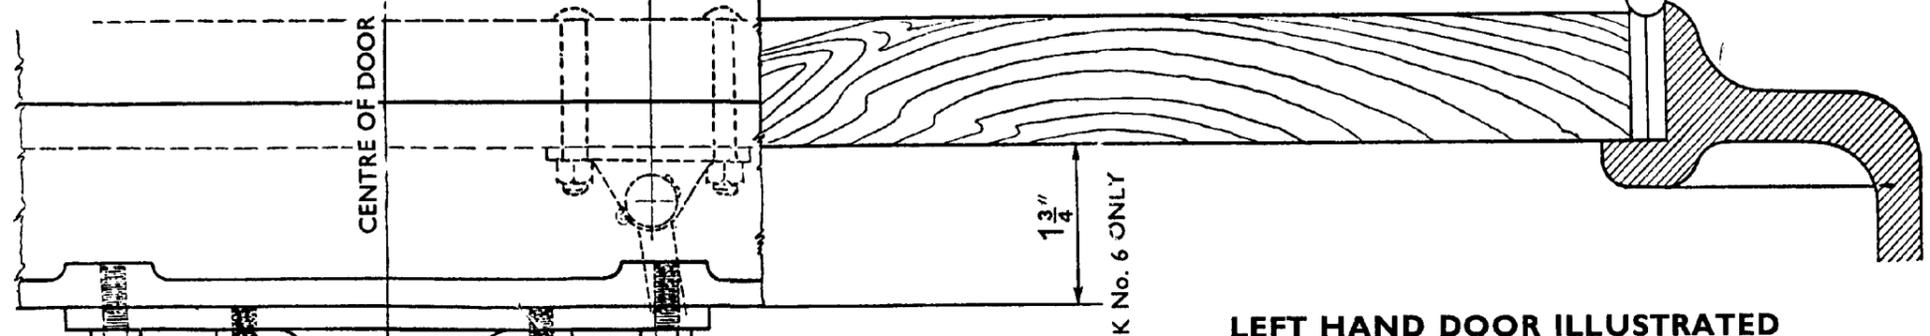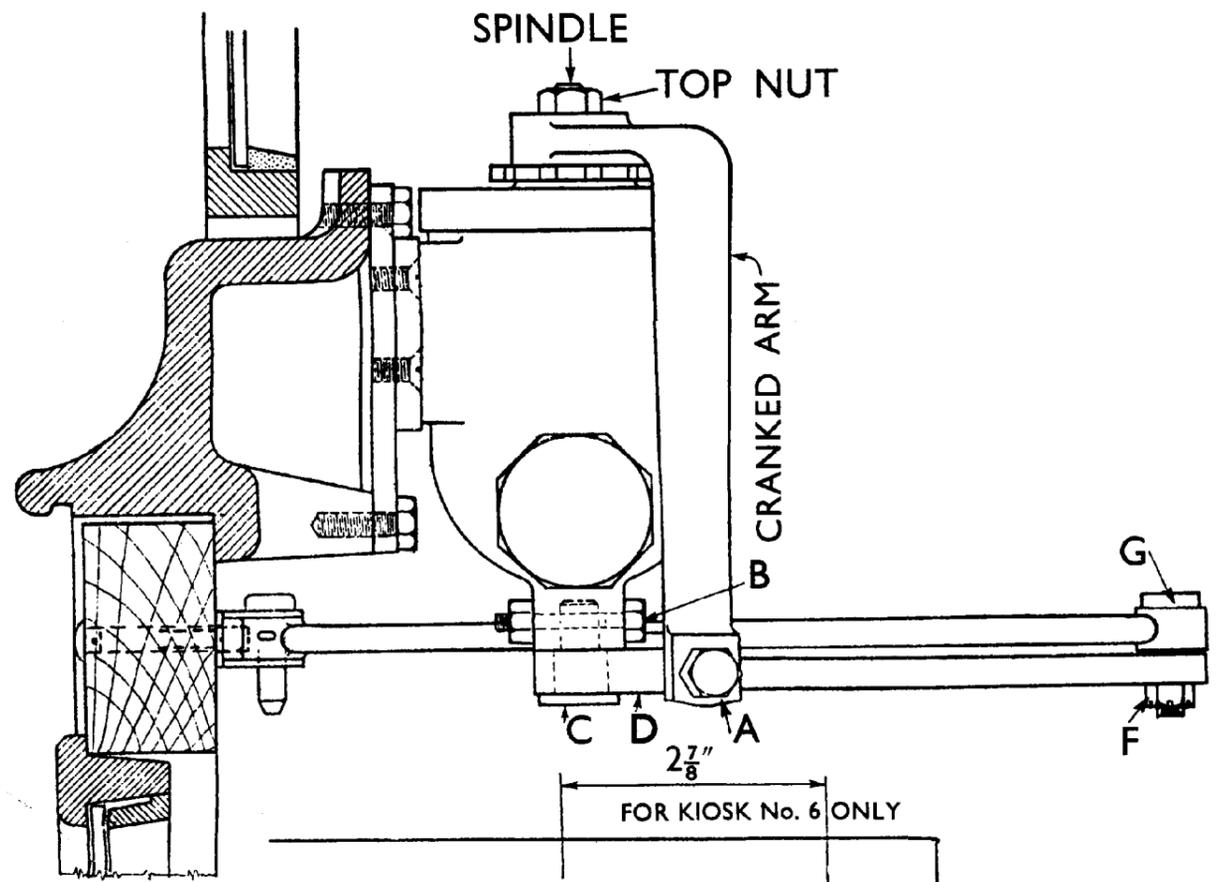

**LEFT HAND DOOR ILLUSTRATED**  
**CRANKED ARM AND SPINDLE SET AT L.**

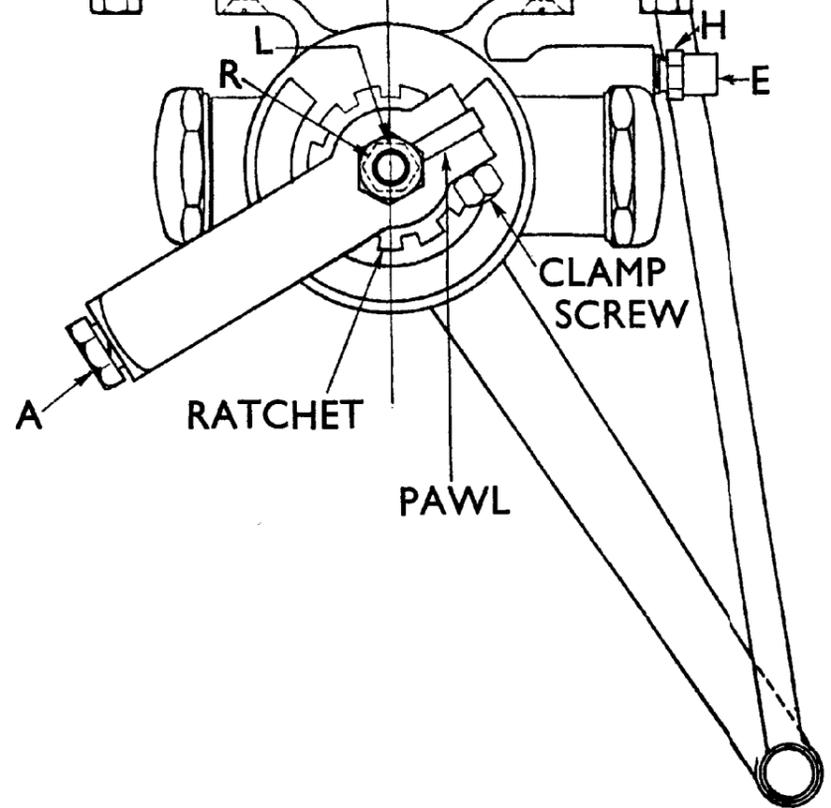

**TO REVERSE CLOSER**

Remove Screw **A**, Screw **B**, Fulcrum Pin **C**, Arm **D**, Nut **F** and Stud **G**.  
 Release Clamp Screw on Cranked Arm and remove Top Nut and Cranked Arm.  
**FOR RIGHT HAND DOOR**  
 Cranked Arm must be replaced as follows :—  
 Flat **R** on Cranked Arm to correspond with Flat **R** on Spindle.  
**FOR LEFT HAND DOOR**  
 Flat **L** on Cranked Arm to correspond with Flat **L** on Spindle.  
 Replace above parts.